

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, take basic safety precautions, including the following.

READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER FOR HOUSEHOLD USE ONLY

DANGER — Any appliance is electrically live, even when the switch is off.

To reduce the risk of death or injury by electric shock:

1. **Unplug this appliance after using and before cleaning.**
2. Do not place or store appliance where it can fall or be pulled into a tub or sink.
3. **Do not use while bathing or in a shower.**
4. Do not place in, or drop into, water or other liquids.
5. Do not reach for an appliance that has fallen into water. **Unplug immediately.** Dry location use only. Do not expose to liquid, vapor or rain.
6. Except when charging, always unplug this appliance from electrical outlet immediately after using.
7. Never operate the adapter if the specification is out of the rating.

DO NOT REACH

INTO THE WATER

WARNING — To reduce the risk of burns, electric shock, fire, or injury to persons:

1. Except when charging, this appliance should never be left unattended when plugged in. **Do not pull, twist, or wrap line cord around appliance.**
2. This appliance should not be used by, on, or near children or individuals with certain disabilities.
3. Use this appliance only for its intended purpose as described in this manual. Do not use attachments not recommended by the manufacturer. Do not use an extension cord to operate this appliance.
4. **Never operate this appliance if it has a damaged cord or plug, or if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to a service centre for examination and repair.**
5. Keep the cord away from heated surfaces.
6. Never drop or insert any object into any opening on this appliance.
7. Do not place appliance on any surface while it is operating.
8. Do not use this appliance with a damaged or broken comb or with teeth missing from the blades, as injury may occur. Before use, make certain blades are aligned properly. (See “Taking Care of Your Trimmer.”)
9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
10. Never operate the appliance with the air openings blocked or place on a soft

surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.

11. Always attach plug to appliance first, then to outlet. To disconnect, turn all controls to OFF, then remove plug from outlet.
12. Do not let skin come into contact with moving blades.
13. Do not short the polarity (output cord). Ensure jack is plugged into the unit before plugging the adapter into outlet.
14. Be sure voltage is correct before plugging in.
15. CAN ICES-3(B).

SAVE THESE INSTRUCTIONS

The Conair For Men® Face & Body Trimmer is a professional grade rechargeable trimmer with electro-chemically formed precision blades with an ultra-sharp cutting angle for smooth, effortless cutting. Lithium-ion technology gives sustained power performance for reliable cordless use, even at low charge levels. Lightweight for easy handling, it can be used with a power cord or cordless for total convenience and control, and with five professional interchangeable heads for allover trimming and grooming you get a perfect result every time. Also included are a 7-position trimmer comb attachment, a stubble comb attachment, a body groomer comb attachment, nose and ear trimmer, foil shaver, charging and storage base and a cleaning brush.

For connection to an electric supply not in the U.S.A., use an attachment plug adapter of the proper configuration for the power outlet.

Warning: Changes or modification to this unit not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

TROUBLESHOOTING

If your cordless/rechargeable trimmer does not seem to be taking a charge, take the following troubleshooting steps before returning it for repair:

1. Be sure the electrical outlet is working by plugging in another appliance to test it.
2. Make sure the electrical plug is not connected to a switch that turns power off when lights are turned off.
3. Make sure that the adapter is inserted into the trimmer properly, all connections are secure and the trimmer switch is in the OFF position.

OPERATING INSTRUCTIONS

IMPORTANT! Use only the adapter and attachments supplied with this appliance. Please note, if the wrong adapter is used, the LED will blink continuously. Once the wrong adapter is removed the LED will continue to blink for some time after removal. This is normal. When charging the appliance the blue LED charging light will flash slowly and continuously until the battery has fully charged, then the blue LED charging light will stop flashing but remain on.

1. Before using for the first time, the appliance should be fully charged continuously for 3 hours. This initial super-charge ensures optimum power performance to ensure smooth, fast trimming every time. Maximum battery capacity will be reached only after 3 charging and discharging cycles.
2. A 2-hour full charge will provide approximately 80 minutes of use and 30 minutes quick charge will supply 20 minutes use.
3. Insert the appliance into the charging and storage stand.
4. Ensure the appliance is switched off.
5. Insert the adapter plug into the hole on the base of the stand and push firmly into position.
6. Route the cord through the channel on the base of the stand and secure in place.
7. Should you wish to charge the appliance without using the charging stand, simply place the adapter plug directly into the trimmer.
8. Plug the adapter into any wall outlet (at the voltage listed on the label affixed to the adapter). Unplug the adapter when not in use.
9. The adapter may become warm while charging — this is normal.
10. The battery life can be improved by periodically allowing the trimmer to run until the motor stops. Immediately turn the switch and fully recharge.

- CORDLESS OPERATION**
1. Ensure appliance is charged for a minimum of 30 minutes. The blue LED charging light will flash when the adapter is correctly inserted into the appliance and connected to the outlet.
 2. Once the appliance is fully charged the blue LED charging light will stop flashing but remain on. Remove the cord from the appliance, turn on and use as required.

MAINTENANCE INSTRUCTIONS

TAKING CARE OF YOUR TRIMMER

BLADE CARE

Because the trimmer blades are precision-made for a very special use, they should always be handled with care. Each time you finish using the trimmer use the cleaning brush provided to brush away any loose hair that has collected in the blades. Then store the trimmer in its storage pouch to protect the blades until the next use.

Be especially careful when changing or adjusting blades. When you have your trimmer serviced, be sure that both blades are sharpened or replaced at the same time.

To promote the long life of the appliance, use your trimmer only for the purpose intended by the manufacturer.

In order to maintain the optimum capacity of the lithium-ion rechargeable batteries, the trimmer should be fully discharged and then recharged for 2 hours every 3 months.

For optimum performance, we recommend you charge the unit for at least 30 minutes before using the appliance each time. This applies whether you are using corded or cordless power.

PREPARATION FOR USE

Always inspect the appliance before use for noticeable signs of damage.

- Do not use if damaged.
- Ensure the heads are free from hair and debris.
- Ensure the appliance is sufficiently charged.
- Use on clean, dry hair that has been combed until tangle-free.

ATTACHING AND REMOVING ACCESSORIES

Make sure that the unit is switched off before changing the trimmer head or accessories.

To attach a head, fit the base of the accessory onto the unit, pressing it until you hear a click.

To remove a head, hold the handle of the unit in one hand and push up on the head with your free hand (**Fig. 1**).

USING THE CUTTING GUIDE

The cutting guide guarantees uniform cutting length.

IMPORTANT: Always attach the cutting guide **BEFORE** turning the trimmer on, and turn unit off before changing the guide. The cutting length of your trimmer is manually adjustable. To increase the cutting length, push the cutting guide up. To reduce the cutting length, push the cutting guide down. The selected length is displayed at the back of the trimmer.

Make sure you always trim or style your beard against the hair growth.

TYPES OF BEARDS/MUSTACHES

GETTING STARTED:

Decide on the type of beard or mustache that best suits your face, taking into account the size of your face and natural growth and



thickness of your beard and/or mustache. After deciding on the form of the beard and/or mustache, it is easy to maintain its appearance by using the trimmer

as soon as you feel it is necessary. For better results, we recommend cutting the beard when it is dry. This helps make the cut precise and comfortable.

To outline using the beard and mustache trimmer:

- Do not attach a comb attachment.
- Hold the trimmer upside down with the blade facing downward.
- Move the trimmer gently downward in small strokes around the edge of the area you wish to outline.
- Having defined the outline, hold the trimmer with the blades pointing upward and move the trimmer upward against the direction of hair growth. This will trim the unwanted hair adjacent to the outline.

7-Position Comb Attachment for Beard and Mustache Trimmer

- Ensure the appliance is switched off.
- Attach the trimmer head.
- Align the trimmer with the tracks at the back of the handle. Slide the trimmer head onto the tracks. Push down the release mechanism to push it right on to the handle.
- The comb attachment will be set to the shortest length when the comb guide is fully pressed down.
- With your thumb, push the guide up to the required length (2–14mm). The comb attachment has 7 positions; 2mm, 4mm, 6mm, 8mm, 10mm, 12mm and 14mm.
- To remove the comb, place your thumb on the back of the attachment and push up.

Using the Beard and Mustache Trimmer

with 7-position Comb Attachment or Taper Comb Attachment

- Attach the 7-position comb attachments and select the required length (2-14mm).
- If you require more than one cutting length, start with the longest length first.
- Switch the trimmer on.
- Hold the trimmer with the teeth of the trimmer pointing upward.
- Move the trimmer upward and outward through the hair, against the direction of hair growth.
- The trimmer will work most efficiently when cutting through hair at its own speed.
- Never switch the appliance off while in the hair.

Note: The beard and mustache trimmer can be used without any comb attachments and will cut roughly to a length of 0.5mm.


Stubble Attachment

The taper control with 6-position switch enables super-fine cut adjustment for precision trimming.

- Attach taper control by sliding the head onto the tracks at the rear of the handle.
- To increase the length by 0.5mm to a cutting length of 1mm, slide the switch across so the line is lined up with the desired length (i.e., 1mm, 1.5mm, 2mm, 2.5mm and 3.0mm.)
- To increase the length by a further 0.5mm to a cutting length of 1.5mm, slide the switch down so both 1 and 2 are visible above the taper control switch.

Body Groomer With Comb Attachment

- Ensure the appliance is switched off.
- Attach the body groomer head by taking

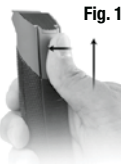

- off the current head and snapping the body groomer head into the base of the appliance.
- Attach the comb attachment by placing on top of the body groomer head and pressing down.
 - To remove the body groomer comb guide push the comb attachment up.
 - To remove the body groomer attachment, place your thumb on the back of the attachment and push up



Using the Body Groomer with Comb Attachment:

- Attach the body grooming attachment.
- Add on the comb attachment if a longer length is required.
- Switch the trimmer on.
- Hold the trimmer flat against the skin.
- Move the trimmer upward and outward through the hair, against the direction of hair growth.
- Make sure to be particularly careful when trimming sensitive areas.
- The trimmer will work most efficiently when cutting through hair at its own speed.
- Never switch the appliance off while in the hair.

Note: The body groomer can be used without any comb attachments and will cut roughly to a length of 0.5mm.

Using the Foil Shaver:

- For an ultra-smooth finish, use the foil shaver attachment.
- Always ensure the foil is not damaged before each use.
- Switch the trimmer on.
- Move the shaver gently over the skin, applying minimal pressure and shaving in the direction of hair growth. Make sure to be particularly careful when trimming sensitive areas.
- Never switch the appliance off while in the hair.



Using the Nose & Ear Trimmer:

- For the safe and easy removal of unwanted nose and ear hair use the rotary trimmer head.
- Switch the trimmer on.
- Insert the trimmer into the nose or ear and gently move the trimmer in a circular motion.
- Only use the trimmer at the entrance to the ear or nose. Do not use any deeper, as this could cause injury.
- Never turn the trimmer off while in the nose and ear hair.



Using the Detailing Trimmer:

- For accurate trim lines and detailed effects, attach the detailing trimmer head.
- Switch the trimmer on.
- Gently move the blade through the area of hair you wish to trim.
- The trimmer will work most efficiently when cutting through hair at its own speed.
- Never turn the trimmer off while in the hair.



CLEANING & MAINTENANCE

To maintain optimum performance, the appliance should be cleaned after each use:


- Remove the comb attachment after use. Rinse under running water and dry thoroughly before storage or use.
- Remove the trimmer head after use. The heads are washable for easy cleaning. Rinse under running water and dry thoroughly before storage or use.
- Do not disassemble the blades.

DISPOSAL OF LITHIUM ION BATTERIES

This trimmer has a lithium ion batteries. To protect the environment, these batteries should be removed and properly disposed of when the unit is no longer operating. To remove the battery block for disposal or recovery, follow these instructions:

1. First, unplug the trimmer.
2. Open the trimmer and remove the batteries using wire cutters.
3. To protect the environment, do not dispose of your batteries with your ordinary household waste.

For more details on recovery of materials and waste treatment facilities, please contact the waste disposal services in your region.

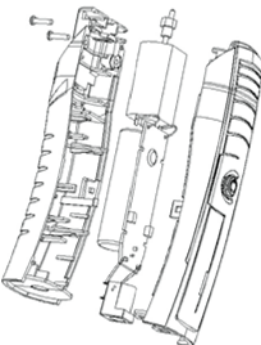

CONTAINS LITHIUM ION BATTERY. MUST BE COLLECTED, RECYCLED OR DISPOSED OF PROPERLY. DO NOT DISPOSE OF IN THE MUNICIPAL WASTE



Beard and Mustache Trimmer



Comb Attachments



Body Groomer Attachment



Detailing Trimmer



Nose/Ear Trimmer



Foil Shaver

LIMITED THREE YEAR WARRANTY

Conair will repair or replace (at our option) your unit free of charge for 36 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service centre listed below, together with your purchase receipt and \$5.50 for postage and handling. In the absence of a purchase receipt, the warranty period shall be 36 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 36 MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.

This warranty gives you specific legal rights, and you may also have other rights, which vary from province to province.

SERVICE CENTRE:

Conair Consumer Products ULC
100 Conair Parkway,
Woodbridge, Ontario, L4H 0L2.
1-800-472-7606
©2013 Conair Consumer Products ULC
www.conaircanada.ca
Consumer Call Centre E-mail :
Consumer_Canada@Conair.com

13CN144091

IB-12370



Have a Question?

Please do not return this product to the retailer.

Call Us First!

Our customer service and product

experts are ready to answer ALL your questions.

Please call our TOLL-FREE customer service number at: 1-800-472-7606 or visit us online at www.conaircanada.ca

**Model GMT7420LIC
Instruction Booklet**

CONAIR *men*